### ----- Introduction

### **Overview**

The SH-6550 is only 1U TFT LCD Monitor. The optional Displays are 15/17" TFT LCD Panel Resolution is  $1024 \times 768/1280 \times 1024$  (Analog VGA Input).

### ----- Installation

### **Rack Mount Accessories**

Figure 1 shows how to attach mounting brackets to the SH-6550 unit for standard 19-inch rack cabinet.


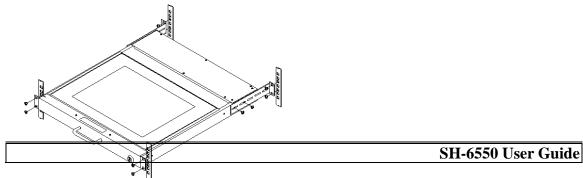


Figure 2 shows how to assemble rack cable support then screw it to the back and inside the rack cabinet vertical post (optional).

Figure 1: Attaching rack mount bracket

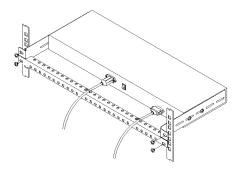

- input supply.
- (3) Connect one end of 15-pin XGA Signal Cable to the signal input port on the LCD Monitor and the other end to the signal output port of PC
- (4) Connect the DC 12V power output jack to the 12V DC input socket of the LCD monitor. Connect the power cord to the adapter and the other end into a suitable AC power outlet socket.
- (5) Now connect the PC power cord to the AC power outlet socket.
- (6) Check all the connections are correct, then, Turn on the LCD monitor power switch..
- (7) A signal of "NO SIGNAL" will show on the upper corner of the LCD panel. As shown in figure 1.
- (8) Turn on the PC's power switch Run the PC for image adjustment.



Figure 1. Display without Signal Input SH-6550 User Guide

## 2.Function Keys and operation:

## 2.1 Function Keys Definition and description:

(1) Menu Key: Use this key to select and execute the magnitude and **CAUTION:** function process.

Only use the AC adapter suppressed and the suppressed of the suppr

		(+ Key)		<b>→</b>		
Press Manu key	Display	1 <sup>st</sup> press	2 <sup>nd</sup> press	3 <sup>rd</sup> press	4 <sup>th</sup> press	5 <sup>th</sup> press
*OSD shows up.	Colour	Picture	2 Function	OSD Manu	Mics	Exit
	5 <sup>th</sup> press	4 <sup>th</sup> press	3 <sup>rd</sup> press	2 <sup>nd</sup> press	1 <sup>st</sup> press	
<b>←</b> (- key)						

(b) Adjusting-and Executing for the desired Selection:


(1<sup>st</sup> selection: Colour Adfustment)


Prace Manu kay 1st prace 2nd prace 2nd prace 4th prace 5th prace


## & Execution Operation"


- (2) + Key:
  - (a) In the Mode-Selection Mode: Pressing this key to locate forward the icon you want to adjust. Pressing it once, it moves one step forward to the next icon. Pressing it twice, it moves forward one more step to next 2nd icon. And so on.
  - (b) Keep pressing down on this key, it flows continually through every icon and stops at the icon when the key is released.
  - (c) In the Adjusting-and-executing Mode: The + Key, becomes the Adjusting-and-executing selection key. Pressing this key to locate forward the icon you want to adjust or execute. Pressing it once, it moves one step forward to the next icon. Pressing it twice, it moves forward one more step to next 2nd icon. And so on.
  - (d) Keep pressing down on this key, it flows continually through every icon and stops at the icon when the key is released.
  - (e) In the magnitude adjustment mode, the + Key, once again, becomes the magnitude Adjusting key. Press it once the magnitude of the adjusting scale will increase one step.
  - (f) Keep pressing down on this key, and it will keep increasing continually until the key is released.
- (3) (Re) in the magnitude adjustment mode, the Key, once again,
  - (a) become the sugnitude of the stay the sket and the magnitude of the magnitude of the stay of the stay of the stay of the magnitude of the m
  - (b) Keep pressing down on this key, and dwild kan an any carried the key is released.
- (4) C. In the Adjusting-and executing Mode: The Key, becomes the Adjusting-and-executing selection key. Pressing this key to
  - (a) Prosato is a Kiew and the on going wantly define the congruint wantly defined as the congruint of the co
  - (b) Press this key regain and the one siter will be attire the flext icon.
  - (c) Upressing raminde, dithat prior to be the knyres tep non the proprietor. rame up bonto switch on your PC first
    - (d) Keep pressing down on this key, it flows continually through every icon and stops at the icon when the key is released.

## 2-2. Quick OSD Adjustment & Execution Operation:

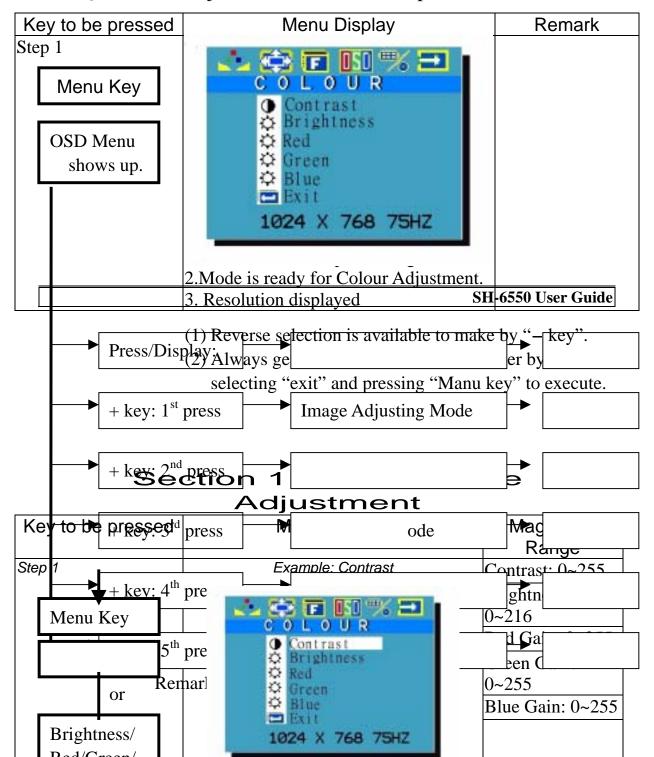


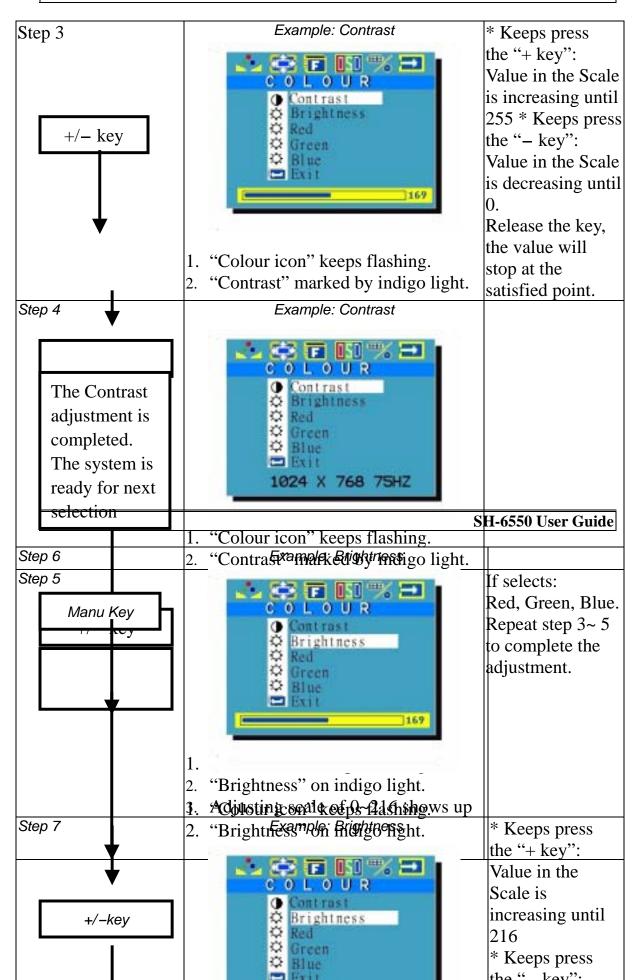


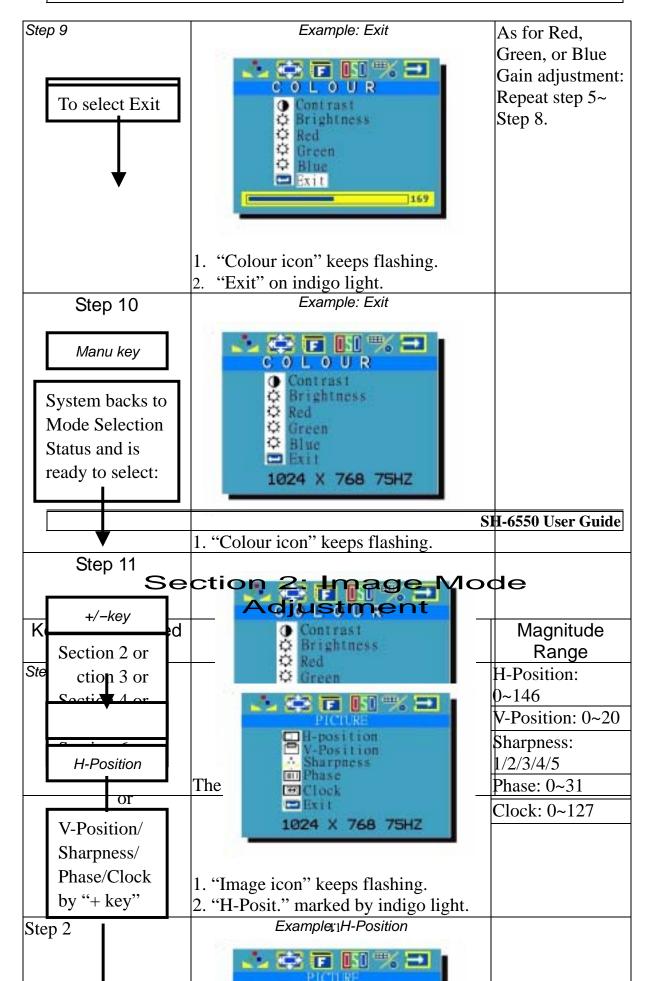

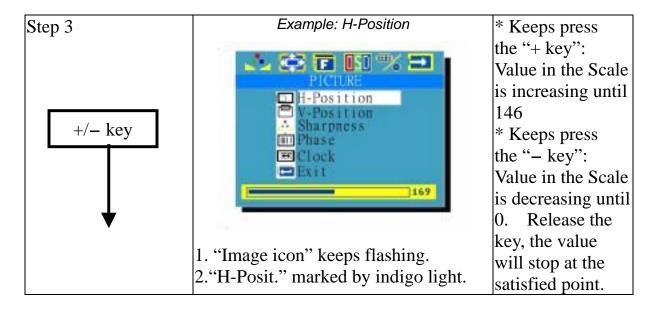



### SH-6550 User Guide

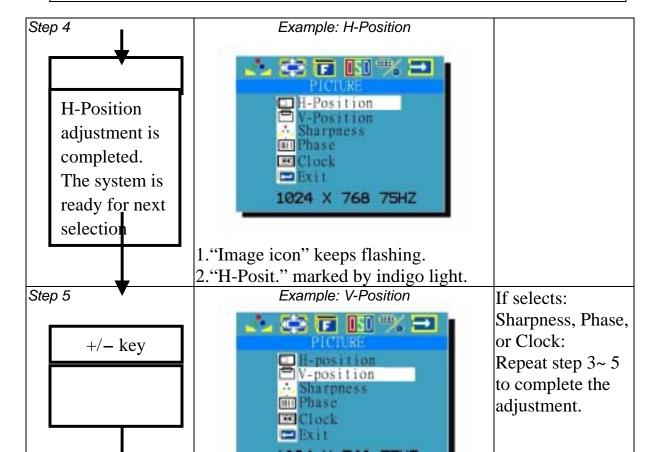


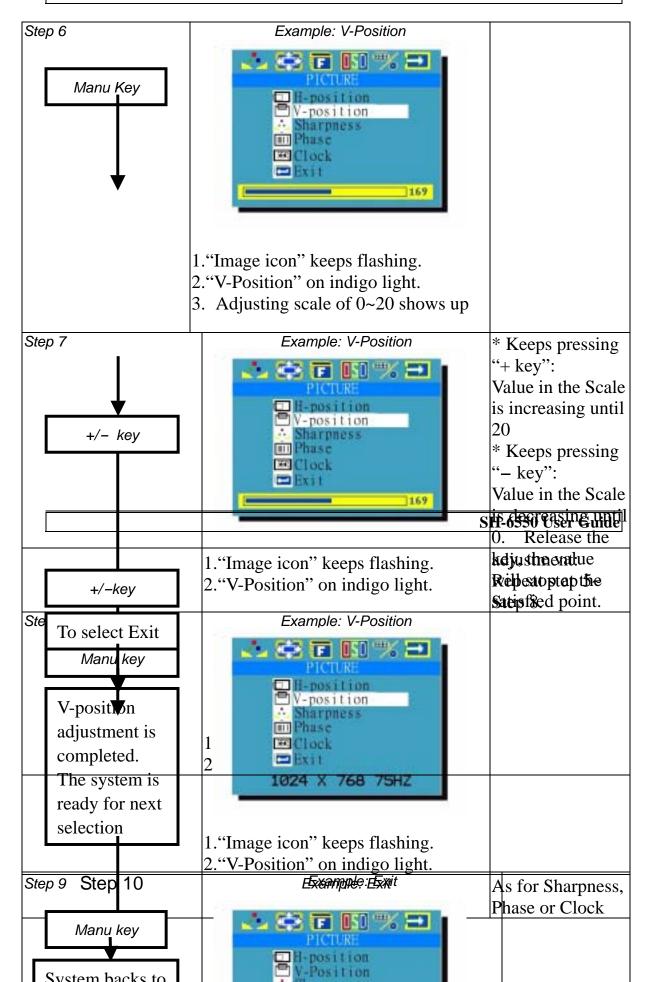

### Section 3: Function Execution

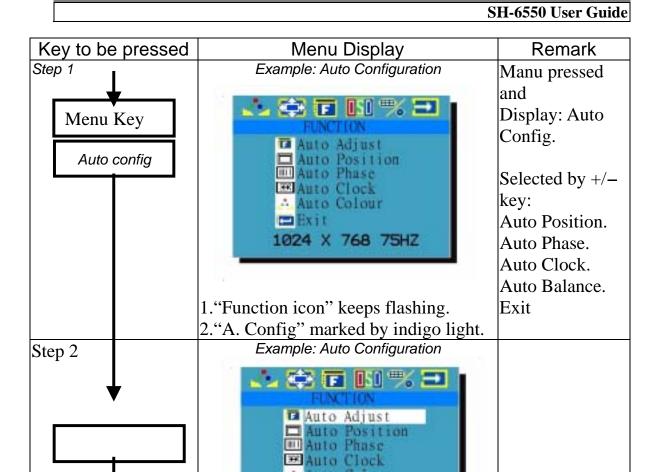


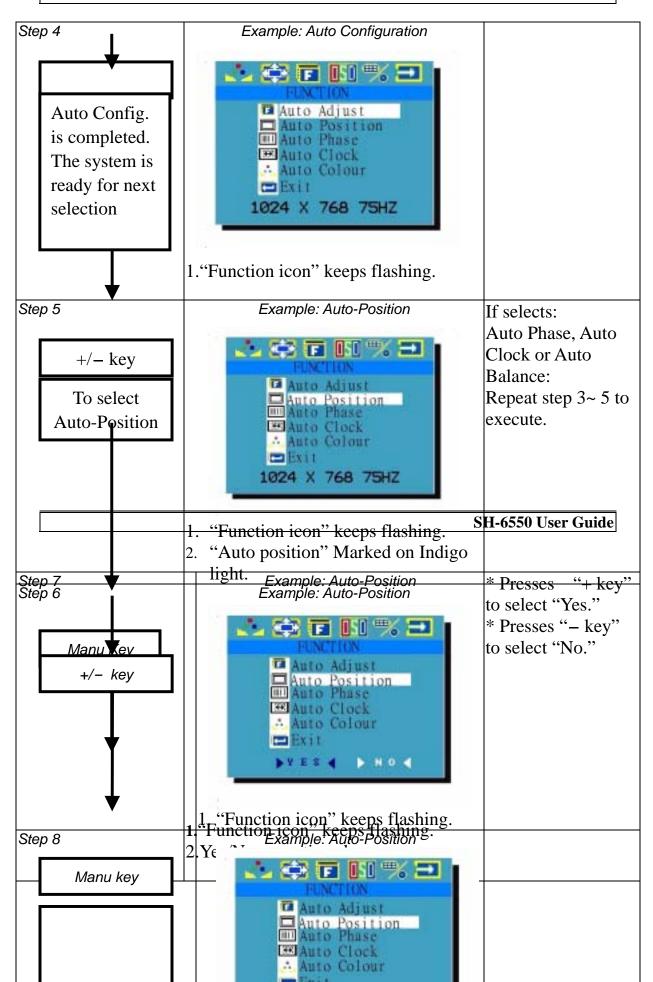


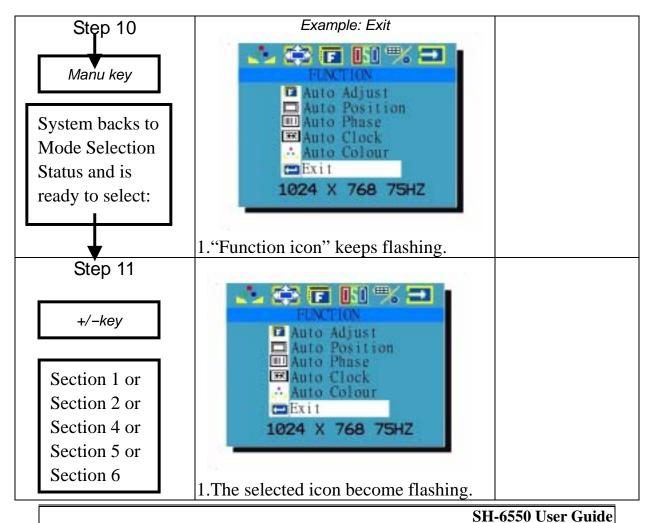

## Section 4: OSD Manu Adjustment


Key to be pressed	Menu Display	Remark
Menu Key  Language	Example: Language  OSD MENU  Language LOSD H-Position COSD V-Position COSD Timeout Exit  1024 X 768 75HZ	Manu pressed and Display: Language  Selected by +/- key: OSD H-Position. OSD V-Position. OSD Timer. Exit
	<ul><li>1."OSD Manu icon" keeps flashing.</li><li>2."Language" marked by indigo light</li></ul>	
Step 2	Example: Language  OSD MENU  Language	Language Table: English. Germany. France.

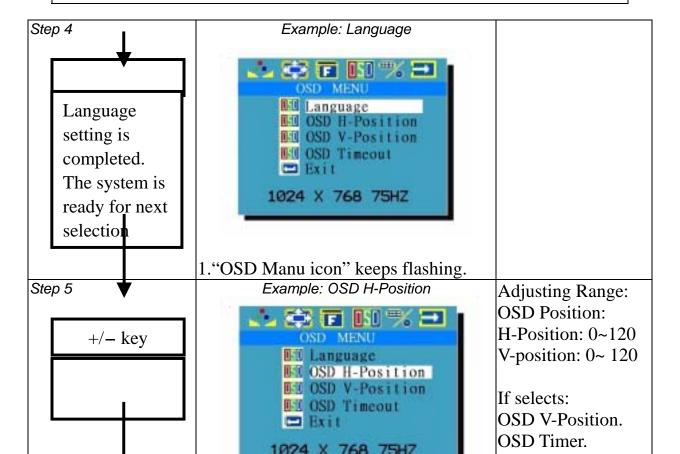

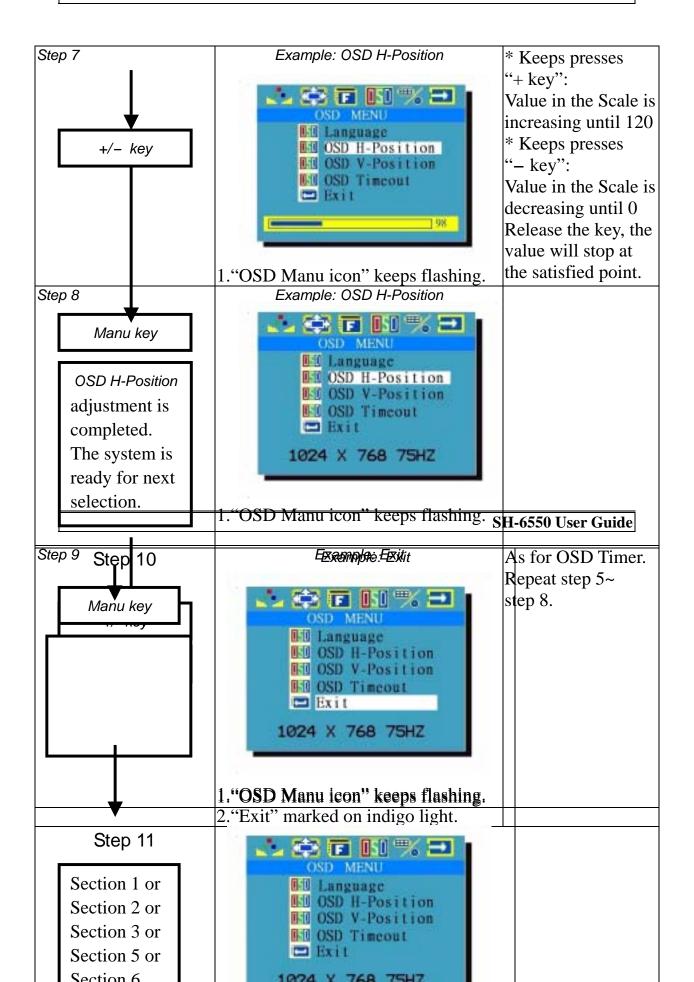

## Section 5: Function Execution

Section	on 5: Function Ex	ecution
Key to be pressed	Menu Display	Remark
Step 1	Example: Input Source	Manu pressed
		and
Menu Key	MISC	Display: Input
11101107 1107	"SInput Source	Source.
Input Source	Mode Select	
,	A Reset	Selected by +/-
	Volume     Exit	key:
	1024 X 768 75HZ	Mode Option.
	AND THE MARK WESTERN	Reset.
		Exit
	1."Misc icon" keeps flashing.	
	2. "Input Source" marked by indigo	
	light.	
Step 2	Example: Input Source	
~ WP _		
▼	MISCELLANEOUS	
Menu Key	Input Source Mode Select	
Wella Hey	A Reset	
	Ф Volume	
	Exit	SH-6550 User Guide
	1024 X 768 75HZ	Sil 6550 Osci Guide
Step 4		
	1."	
Ste	MISCELLANDOS	Presses "+
	Input Source Mode Select	key" to select
	A Reset	one of the Input
	to Volume	Source among
	□ Exit	DSUB, AV or
	1024 X 768 75HZ	S-VIDEO
		rightward.
	4⊅ Volume	* Presses "-
Step 5	□ Exit	
	DSUB	keyeltotselect Russef the Input
<b>▼</b> *		
+/ <b>-</b> key	1." MISCELLANEOUS	Repeat stoping 5 to
	" Input Source	EXUREAV,
	Mode Select	S-VIDEO
_	A Reset	leftward
<u> </u>	♥ Volume  □ Exit	
	1024 X 768 75HZ	

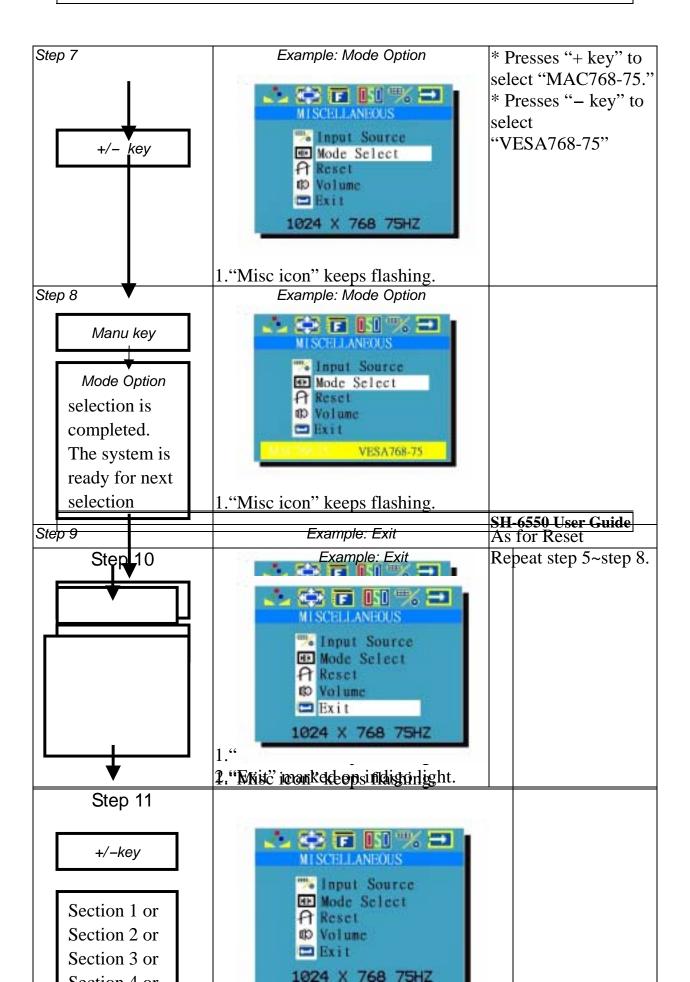

Section 6: OSD Exit

Key to be pressed	Menu Display	Remark
	Example: Exit	
Mode Selection:	EXIT	
Exit		
	1024 X 768 75HZ	
	1. "Exit icon" keeps flashing.	
	2.Only "Exit" displayed on OSD.	
Step		
Menu Key	OSD Disappeared	

# 3. Specification and Appendix:

# 3-1 Technical Specification:

Viewing Angle	-60~60 degree (H), -55~45 degree (V)
Display Colors:	16.7 M (8 bits/color)
	0.297 (H) x 0.297 (V)
Contrast Ration:	350:1
Brightness (cd/m2):	250nit
Display Area (mm):	304.1 (H) x 228.1 (V)
Power Supply:	AC 90~264, 50~60Hz Universal

## 3-2. Appendix A: Systems Compatible:

Input Mode	Resolution	Zoom to 1024x768
XGA	1024 x 768	1:1
SVGA	800 x 600	HQ scale up
VGA	640 x 480	HQ scale up
DOS (Text)	640 x 480	Scale up
DOS (EGA)	640 x 350	Scale up
TEXT	720 x 400	Scale up
MAC	832 x 624	HQ scale up
NTSC	720 x 240(I)	De-interlace
PAL	720 x 288 (I)	De-interlace

## 3-3: Appendix B: Modes supported

	Resolution	Horiz.F (KHz)	Vert. F(Hz)	Display	Remark	
	1,024 x 768	60	75	OK		
		60	75	OK	MAC	
		58	72	OK		
		56	70	OK		
		48	50	OK		_
	832 x 624	49	75	OK SI	I-6550 User Guid	de
PRIC	CE <b>BRID *060P</b> HE	PDOCU <del>l</del> 6.,	75	OK		
The use o	direct vendor makes	48 no warranty or repr n, and es <b>y</b>	esentation, expresse claims i <b>60</b> uality, p	d or implied with reerfoSHa <b>0</b> 4e, merch	espect to the contents antability, or fitness	or for
• •	particular purpose.	35	. 56	OK		
The oblig	direct vendor also gation 20 Xotal Qany	user of such revision	to revise or updat ons or updates. Fo	<del>e the product or</del> r further <b>M</b> foSHati	documentation without on, please contact yo	out our
direc	t vender. x 480	37	75	OK		
		37	72	OK		
4.11		35	66	OK .		
All t	he brand names and	registered trademarl	60 cs are the property of	OK	wners.	
	640 x 400	31	60	OK		
		24	56			
	640 x 350	31	70			

## Limited Warranty

IN NO EVENT SHALL THE DIRECT VENDOR'S LIABILITY FOR DIRECT OR INDIRECT, SPECIAL, INCIDENTIAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFIT, LOSS OF BUSINESS, OR FINANCIAL LOSS WHICH MAY BE CAUSED BY THE USE OF THE PRODUCT EXCEEDS THE